


# POWER MIRROR CONTROL SYSTEM


## PARTS LOCATION

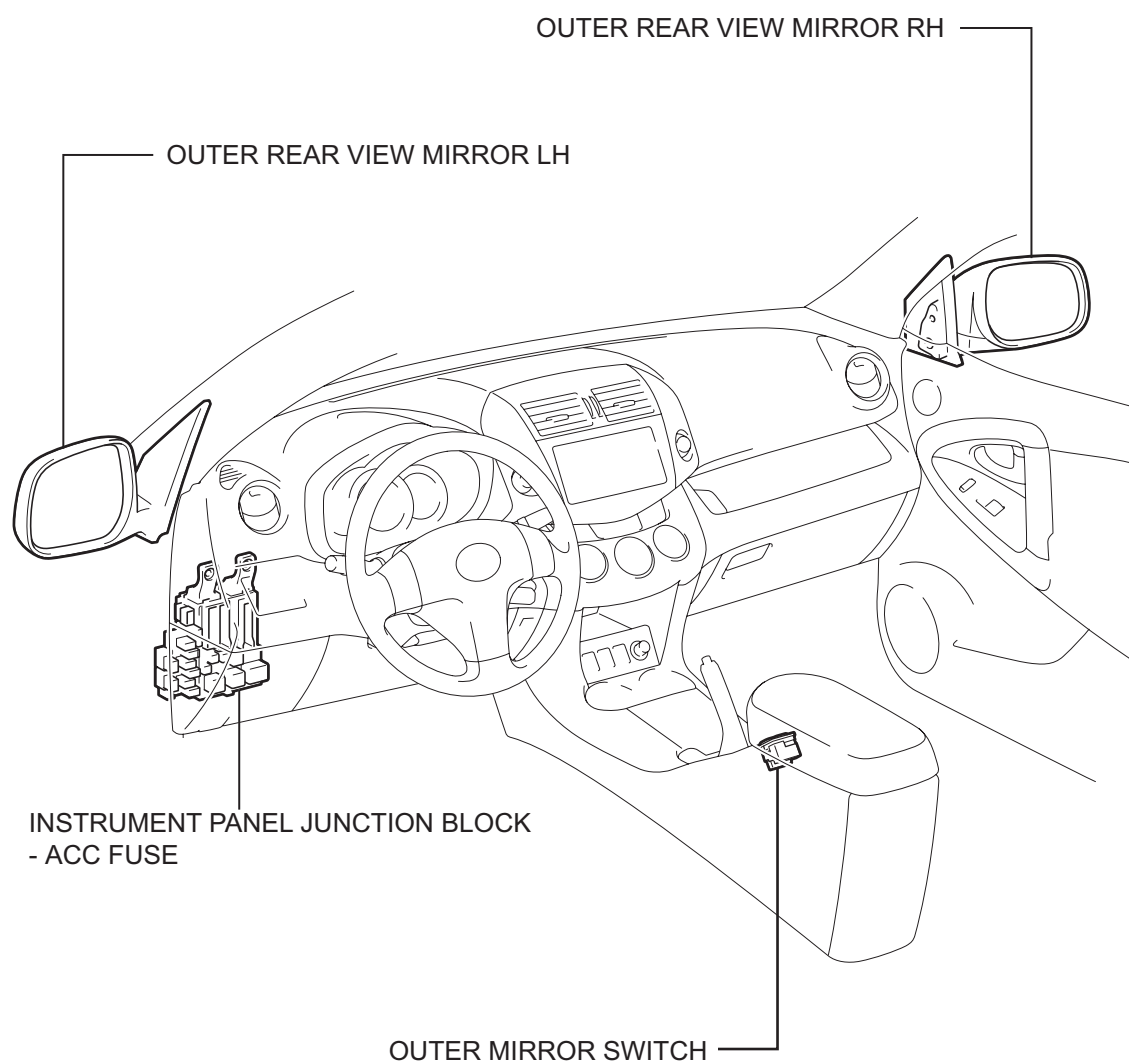

MI

SYSTEM DIAGRAM

MI

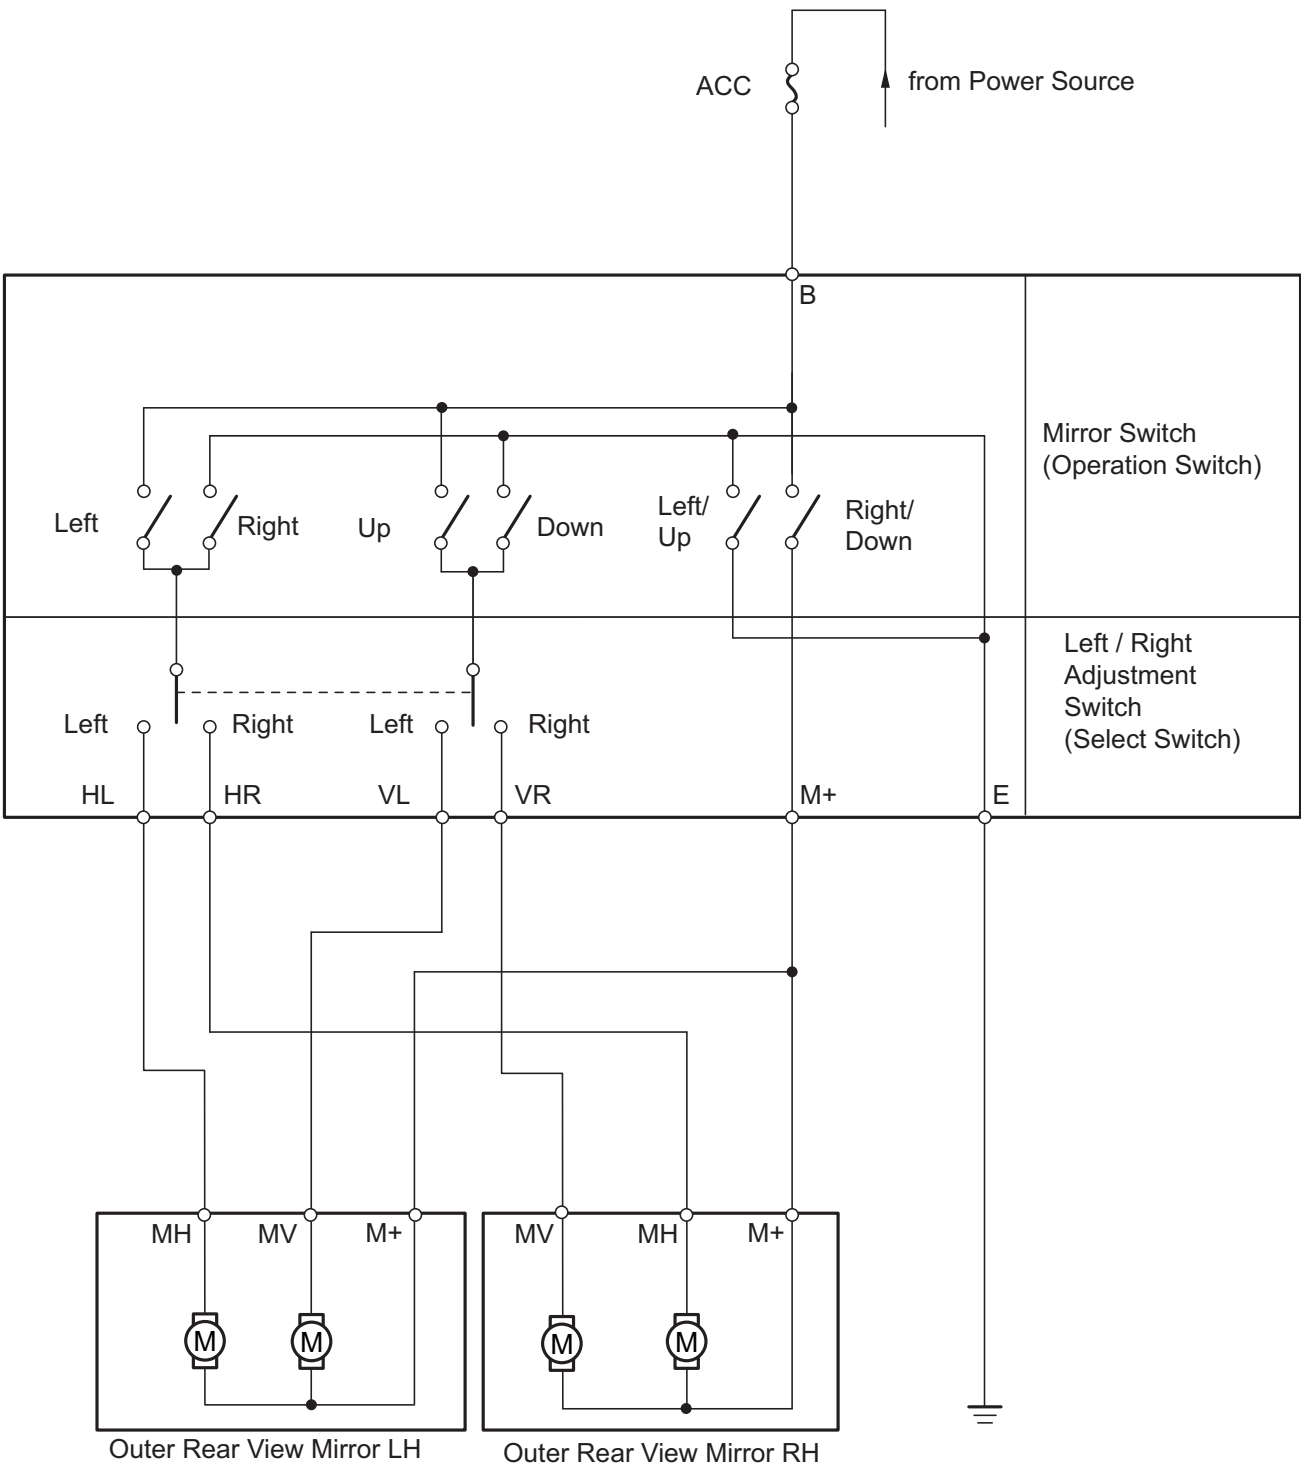

---

## SYSTEM DESCRIPTION

The outer mirror switch controls the outer rear view mirror LH and RH.

PROBLEM SYMPTOMS TABLE

HINT:  
Use the table below to help determine the cause of the problem symptom. The potential causes of the symptoms are listed in order of probability in the "Suspected area" column of the table. Check each symptom by checking the suspected areas in the order they are listed. Replace parts as necessary.

Power mirror control system

Symptom	Suspected area	See page
Mirror does not operate	1. ACC fuse	<a href="#">MI-1</a>
	2. Outer mirror switch	<a href="#">MI-13</a>
	3. Outer rear view mirror	<a href="#">MI-10</a>
	4. Wire harness	-
Mirror operates abnormally	1. Outer mirror switch	<a href="#">MI-13</a>
	2. Outer rear view mirror	<a href="#">MI-10</a>
	3. Wire harness	-